Требуется сброс!

Данный автомобиль может быть оборудован системой электронной стабилизации курсовой устойчивости (ESC), которая может потребовать сброса после РУУК.

CodeLink® или OEM сканнер требуется для проведения сброса и уверенности в должном функционировании системы ESC.

Для определения оборудован ли автомобиль контролем курсовой устойчивости (ESC): Немедленно после установки ключа зажигания в положение ON и во время проверки лампочек, найдите индикатор ESC. Им может быть символ или имя системы (VSC, VDC, ESP, и

Требования Регулировки Установки Колес

Vehicles with ICC (Intelligent Cruise Control) / FCW (Forward Collision Warning) require adjustment of the distance sensor following a wheel alignment. This adjustment requires special tools and procedures.

If using WinAlign software previous to version 12.1.2 (press the ctrl, shift and K1 keys simultaneously to identify the WinAlign version), consult vehicle manufacturer's documentation regarding special tools and procedures prior to performing a wheel alignment.

To examine the procedures and tools required, select the Adjust ICC / Adjust FCW icon from the procedure bar (WinAlign versions 12.1.2 and greater).

CAUTION: Do not align vehicles with ICC/FCW without the proper tools and procedures. This could result in an incorrect sensor alignment.

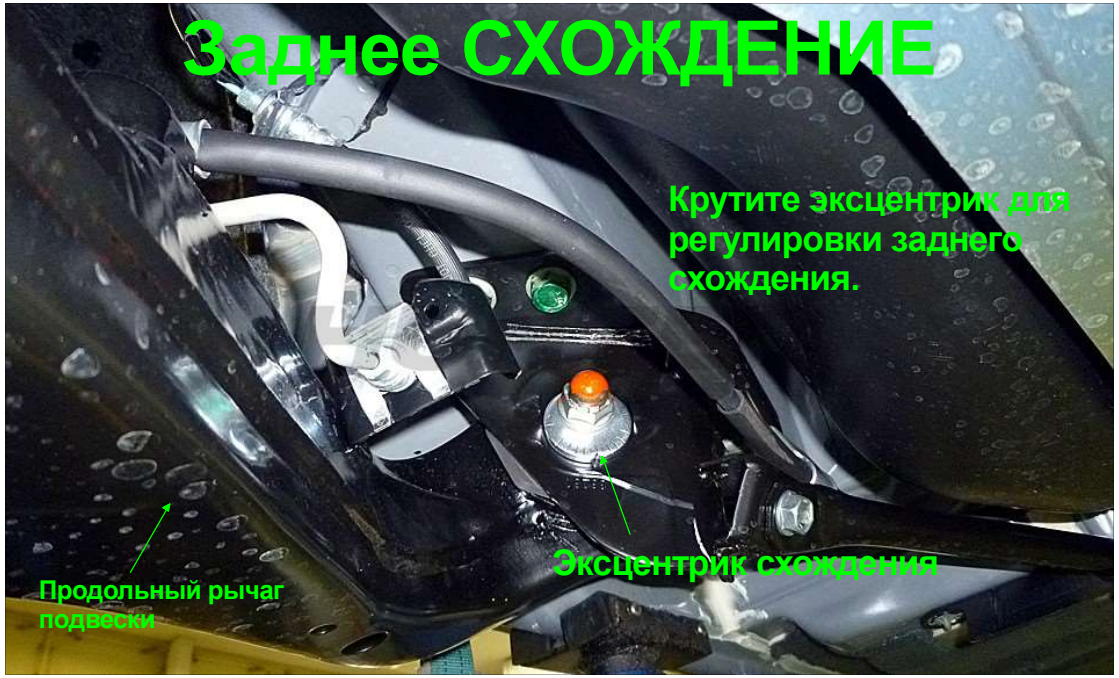

Изготовитель не регламентирует процедуру регулировки переднего РАЗВАЛА и ПРОДОЛЬНОГО НАКЛОНА ШКВОРНЯ.